

iPower IP Phone H.323 User Manual

Ø	<i>iPower H.323 phone Appearance Introduction:</i>	2
Ø	<i>Function Keys of iPower H323 Phone Introduction:</i>	2
Ø	<i>Features</i>	2
Ø	<i>Standard and Protocol</i>	3
Ø	<i>Operating requirements:</i>	3
Ø	<i>Electric requirements:</i>	3
Ø	<i>Size:</i>	4
Ø	<i>Installation:</i>	4
Ø	<i>Configuration</i>	4
Ø	<i>Configured by WEB</i>	7
Ø	<i>Configured by PalmTool</i>	18
Ø	<i>Telnet Configuration</i>	18
Ø	<i>IPOWER TELNET COMMANDS EXPLANATION</i>	19
	<i>IPOWER TELNET COMMANDS</i>	19
Ø	<i>Upgrade iPower IP phone</i>	27
Ø	<i>Usage of the phone</i>	27

Ø **iPower H.323 phone Appearance Introduction:**

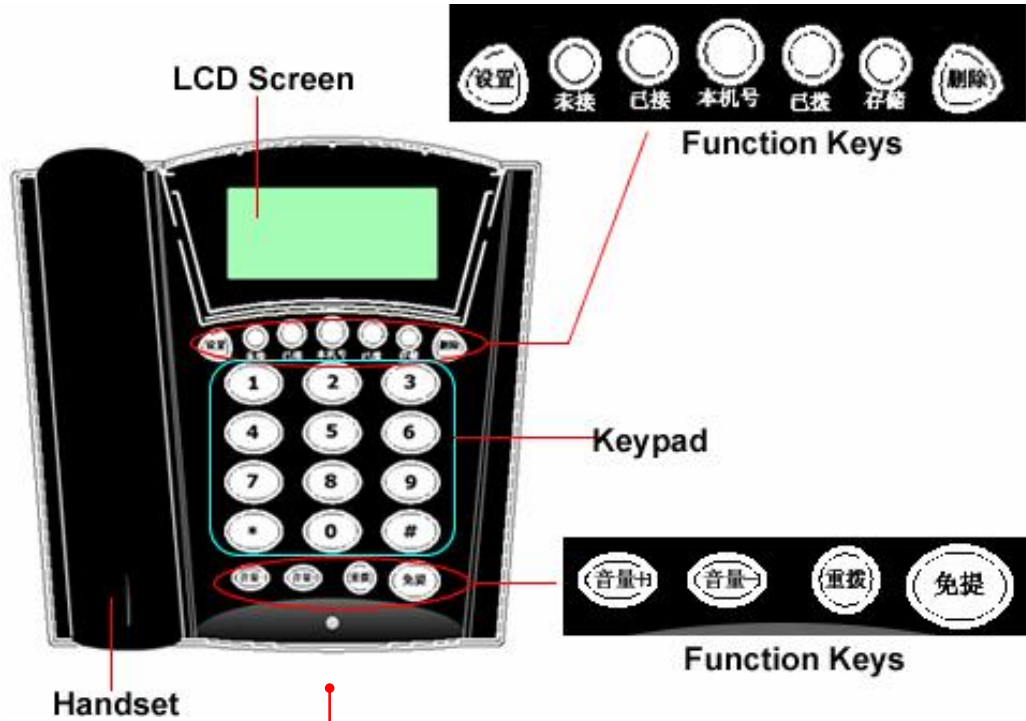


Fig 1.1 iPower H323 Phone Front Illustration

Ø **Function Keys of iPower H323 Phone Introduction:**

Keys	Function
Local IP	With handset hung, press this key to get local IP address of the phone
Missed Calls	With handset hung, press this key to review missed number
Received Calls	With handset hung, press this key to review received number
number	With handset hung, press this key to get phone number
Dialed Calls	With handset hung, press this key to review dialed number
Save	Save speed dial number
Delete	While reviewing missed, received or dialed number, press this key to delete current number
Redial	While reviewing missed, received or dialed number, press this key to dial current number
Speaker	Press this key to have a call without lifting the handset
Volume+	Increase the volumes of handset or speaker; turn over the record backward
Volume-	Decrease the volumes of handset or speaker; turn over the record forward
Keypad	With handset picked or pressing speaker, press this key to dial number

Ø **Features**

Ø **Hardware**

- Main chip—PA1688 50MHz
- Data Memory—2MB SDRAM
- Program Memory—1or 2 MB Flash memory
- Ethernet Jack—Four 10/100M jacks

- AC/DC adapter—Input AC100--- 230V, Output 9V DC, 1A

Ø Software

- DHCP support for LAN or Cable modem
- PPPoE support for ADSL or Cable modem
- Set phone by HTTP web browser or Telnet
- Upgrade by FTP
- Support major G.7XX ;GSM610 audio codec
- VAD(Voice active detect)
- CNG (Comfort noise generation)
- Dynamic voice jitter buffer
- G.167/165 compliant 16ms echo cancellation
- Tone generation and Local DTMF re-generation according with ITU-T
- E.164 dial plan and customized dial rules
- 100 entries for speed dial
- 80 entries each for missed calls, answered calls and dialed calls
- Adjustable volume for both handset and speaker
- Voice prompt
- Hotline
- Support adjustable user password and super password

Ø Standard and Protocol

iPower H323 Phone supports following standard and protocol:

- IEEE 802.3 /802.3 u 10 Base T / 100Base TX
- Major G.7XX; GSM610 audio codec
- H.323 V4
- TCP/IP: Internet transfer and control protocol
- RTP: Real-time Transport Protocol
- RTCP: Real-time Control Protocol
- VAD/CNG save bandwidth
- DHCP: Dynamic Host Configuration Protocol
- PPPoE: PPP Protocol over Ethernet
- DNS: Domain Name Server
- Telnet: Internet's remote login protocol
- FTP: File Transfer protocol
- TFTP: File Transfer protocol (optional)
- HTTP: Hyper Text Transfer protocol
- Build in H.323 proxy

Ø Operating requirements:

- Operation temperature: 0 to 50° C (32° to 122° F)
- Storage temperature: -30° to 65° C (-22° to 149° F)
- Humidity: 10 to 90% no dew

Ø Electric requirements:

- Voltage: 9V DC
- Power: 9W (max.)

- Power adapter: AC/DC input 100-230V, output 9V 1A
- Network interface: 4X RJ-45 Ethernet Connectors

Ø Size:

170 x 175 x 85 mm (L x W x H)

Ø Installation:

1. Connect handset to base: insert handset cord into handset cord jack at the left side of the base.
2. Connect IP phone to Internet: plug the RJ-45 Ethernet cable into the Ethernet Jack. Plug the other end of the cable into HUB.
3. Power on IP phone: plug the power cord adapter into the Power Jack. Then plug the other end of the power cord adapter into the appropriate wall outlet. Fig 2.3 Power on IP phone

Ø Configuration

Four different ways can be used to configure iPower H.323 phone: phone keypad, web browser, Telnet commands and PalmTool configuration tool on computer.


Ø Phone Keypad setup


- **Function Keys Introduction:** When using keypad and LCD to configure the settings of IP phone, following keys will be used:


Keys	Function	Keys	Function
Set	Enter setting mode	Speaker	Enter submenu; confirm change
Vol+	Turn over menu backward	Vol -	Turn over menu forward; move cursor backward
Keypads	Modify values	Redial	Exit current menu; exit setting mode

Refer to above operation; you can reach any menu to modify any value. Please refer to following structure illustrations to learn the values of each menu item. As for the meaning of each item and value, please refer to **Web Browser Setting** chapter.


- **Menu Structure:**

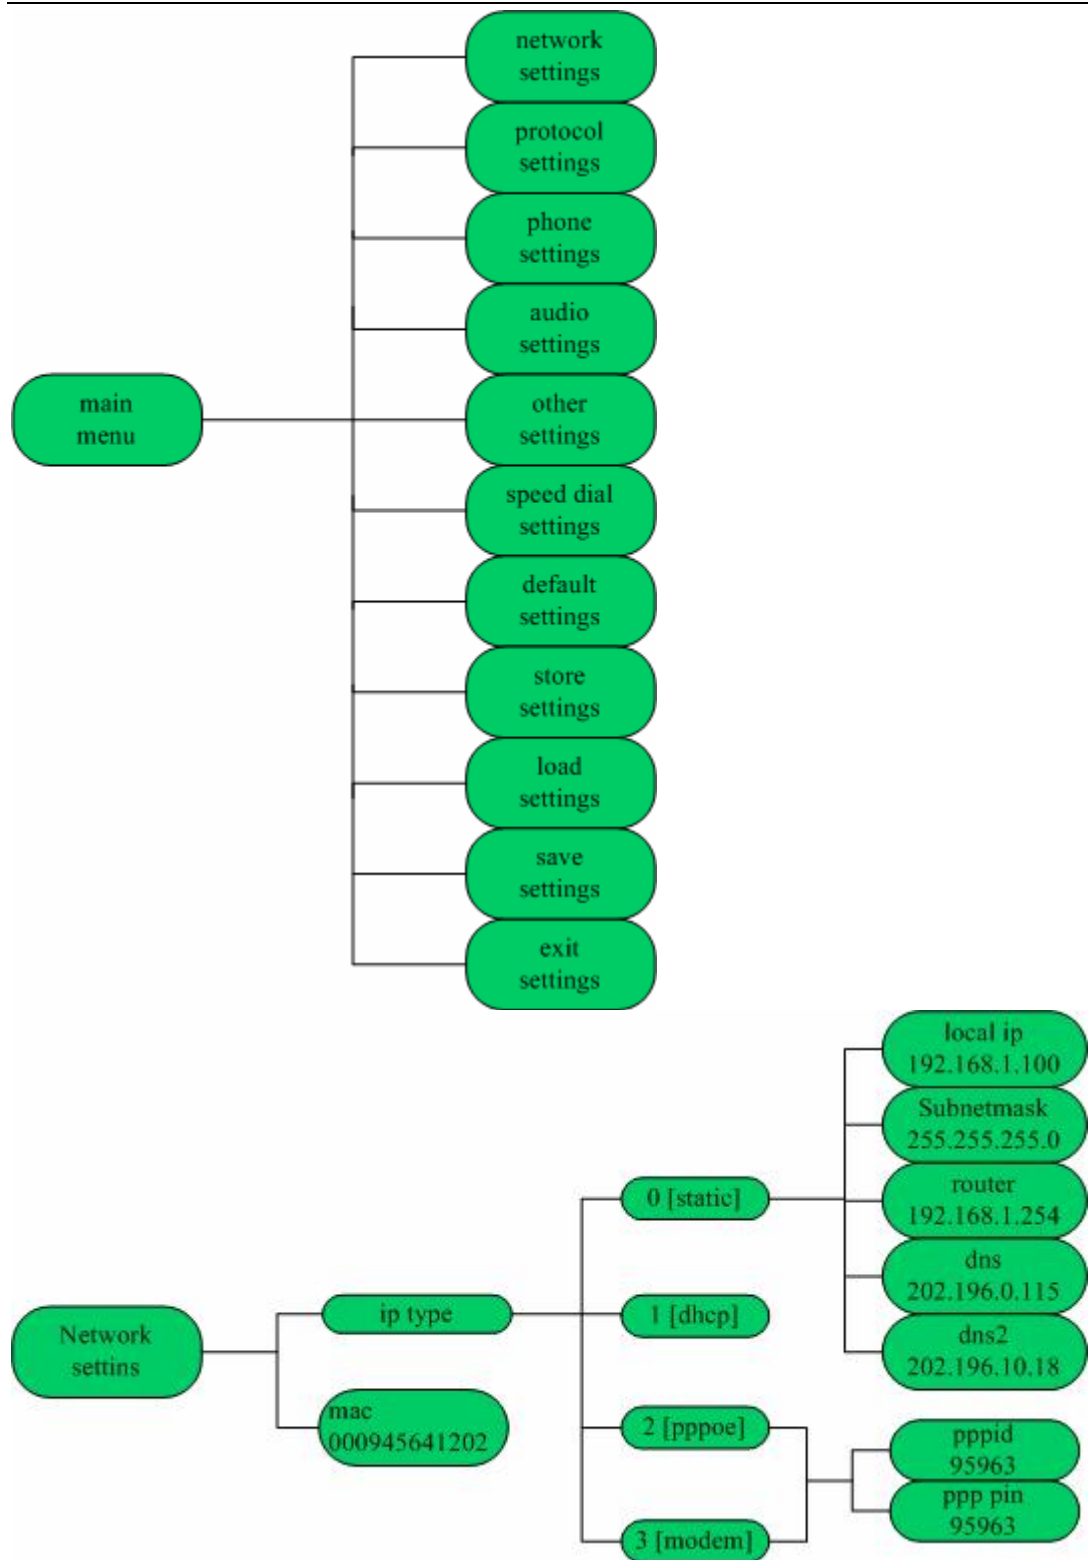

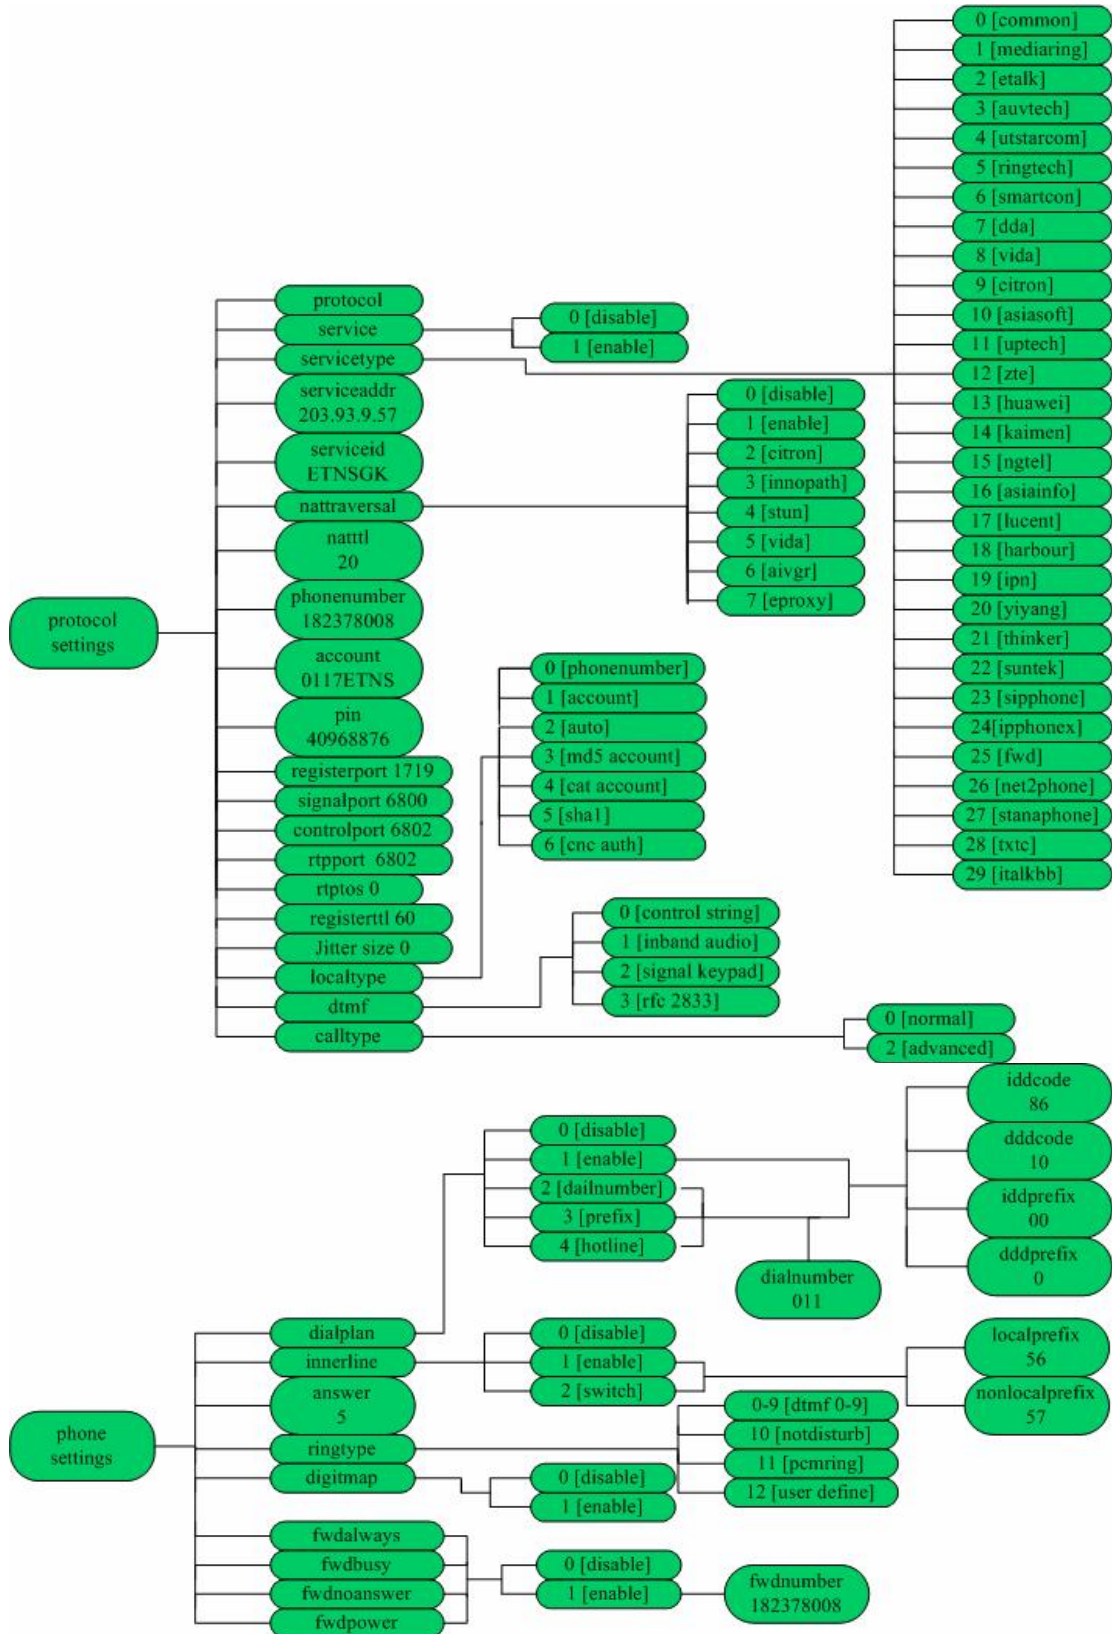

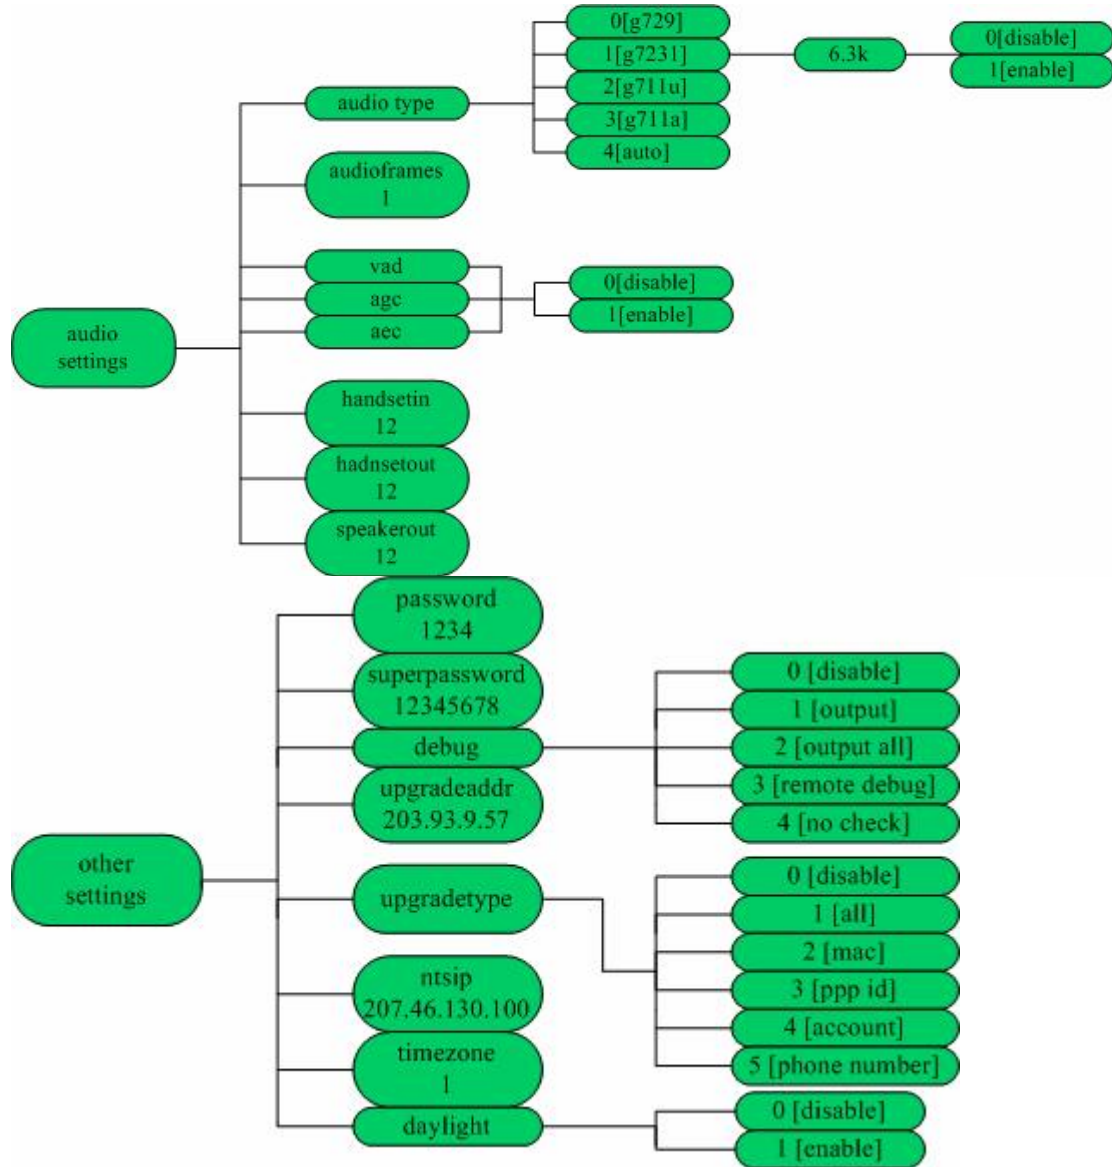

Ø Configured by WEB

Double click  icon to open the IE browser. Input the IP address of the phone into address bar (Address), and then input password of the phone into the following page. Default password 1234 is ordinary password and super password is 12345678. With Debug set 0[disable], please input super password; while Debug is not set as 0[disable], please input ordinary password. Then click button. The following configured page will popup. Refer to Fig 3.1 please.

network settings					
iptype	static	ppp id		ppp pin	
local ip	192.168.1.100	subnet mask	255.255.255.0	router ip	192.168.1.254
dns	202.106.46.151	dns2	202.96.128.68	mac	00-0d-ea-00-00-03
protocol settings					
use service	<input checked="" type="checkbox"/>	register ttl	60	jitter size	0
service type	common	service addr	203.93.9.57	service id	
nat traversal	citron	nat addr		nat ttl	0
phone number	82378801	account		pin	
register port	1724	signal port	1734	control port	50000
dtmf	control string	dtmf payload	101	rtp port	50000
local type	phonenumber	call type	advanced	rtp tos	0
phone settings					
use dialplan	disable	dial number		ddcode	
idcode	886	iddprefix		dddprefix	
inner line	disable	innerline prefix			
dual mode	disable	dualmode prefix			
ring type	dtmf1	use digitmap	<input type="checkbox"/>	call waiting	<input type="checkbox"/>
forward number		fwd poweroff	<input type="checkbox"/>	fwd noanswer	<input type="checkbox"/>
fwd always	<input type="checkbox"/>	fwd busy	<input type="checkbox"/>	answer	30
audio settings					
vad	<input checked="" type="checkbox"/>	agc	<input type="checkbox"/>	aec	<input checked="" type="checkbox"/>
codec1	g729	codec2	g7231	codec3	g711u
codec4	g711a	codec5	gsm		
g.723.1 high rate	<input checked="" type="checkbox"/>	audio frames	1		
handset in (0-15)	5	handset out (0-31)	20	speaker out (0-31)	20
other settings					
password	1234	super password	12345678	debug	output
snmp ip	0.0.0.0	upgrade type	disable	upgrade addr	
use daylight	<input type="checkbox"/>				
timezone	(GMT+08:00)Beijing,Hong Kong,Urumqi				
Save Settings		Address Book		Upgrade Firmware	

Fig 3.1 Http Setting

Network Setting:

network settings					
iptype	static	ppp id	test1	ppp pin	test1
local ip	192.168.1.100	subnet mask	255.255.255.0	router ip	192.168.1.254
dns	202.106.196.115	dns2	202.96.128.68	mac	00-09-45-63-17-d8

Fig 3.2 Network Setting

- **iptype:** Set how IP phone gets relevant network parameters by selecting corresponding item from drop down list.
- n **static ip:** Select this item to authorize users set IP address, subnet mask and router IP address of IP phone manually.
- n **dhcp:** Select this item to enable DHCP mode. With this system, your LAN or router automatically assigns all the required network parameters to any device connected to it when the device log on. IPOWERT IP phone is shipped from the factory with DHCP on. So, if you're LAN or router is configured to use DHCP addressing, the IP phone's LAN parameters will automatically be configured as soon as it is connected to the LAN or router and powered up.

- n **pppoe:** Those ADSL and Cable Modem users please select this item for it is a protocol especially designed for them. With this system, ADSL ISP automatically assigns all the required IP parameters to any device connected to it when the device log on.
- n **modem:** If the IP phone used with modem, please select this item to get relevant network parameters auto. Then please fill ID and pin into ppp id and pppin fields.
- **ppp id:** With **pppoe** or **modem** selected in **iptype** drop down list, please enter the user name here.
- **ppp pin:** With **pppoe** or **modem** selected in **iptype** drop down list, please enter the password here.
- **local ip:** With **static ip** selected in **iptype** drop down list, please enter IP address of IP phone here.
- **subnet mask:** With **static ip** selected in **iptype** drop down list, please enter subnet mask of IP phone here.
- **router ip:** With **static ip** selected in **iptype** drop down list, please enter router IP address of IP phone here.
- **dns:** With **static ip** selected in **iptype** drop down list, please enter IP address of DNS server here.
- **dns 2:** With **static ip** selected in **iptype** drop down list, please enter IP address of backup DNS server here.
- **mac:** MAC address is the physical address supplied by the Ethernet NIC. IPOWERT phone is shipped from the factory with a unique algorithm MAC address printed on the back of the base.

Protocol Setting:

protocol settings					
use service	<input checked="" type="checkbox"/>	register ttl	<input type="text" value="15390"/>	jitter size	<input type="text" value="0"/>
service type	<input type="text" value="common"/>	service addr	<input type="text" value="203.93.9.57"/>	service id	<input type="text"/>
nat traversal	<input type="text" value="citron"/>	nat addr	<input type="text"/>	nat ttl	<input type="text" value="0"/>
phone number	<input type="text" value="1067"/>	account	<input type="text"/>	pin	<input type="text"/>
register port	<input type="text" value="1720"/>	signal port	<input type="text" value="1720"/>	control port	<input type="text" value="1722"/>
dtmf	<input type="text" value="control string"/>	dtmf payload	<input type="text" value="101"/>	rtp port	<input type="text" value="1722"/>
local type	<input type="text" value="account"/>	call type	<input type="text" value="advanced"/>	rtp tos	<input type="text" value="0"/>

Fig 3.3 Protocol Setting

- **use service:** Enable/disable service by checking/clearing this box.

To make calls through gatekeeper, please check this box; otherwise, phone can only make IP-to IP calls or calls through gateway.

- **register ttl** : IP phone will send a keep-alive registration message to H323 gatekeeper every “**register ttl**” seconds. The value range is 10-65535. Default is 60.
- **jitter size** : Set buffer size of RTP package. The value range is 0-32.
- **service type**: This option is used to accommodate the miscellaneous requirements of the system providers. When IP phone is connected to these systems, please select the corresponding service type. Please also visit <http://www.aredfox.com/set.htm> for reference configuration of some of these systems.

§ **Common**: no special requirements

§ **Mediarling**: use Mediarling prepaid card

§ **Etalk**: use etalk prepaid card. When this is selected, please select “**dialnum**” from the “**Use dialplan**” list box and put “**00**” into “**dial number**”.

§ **Auvtech**: use Auvtech’s H.323 system. When connected with Auvtech’s system, please select “**auvtech**” from the “**nat traversal**” list box, select “**account**” from the “**local type**” list box.

§ **Subcentrex**: Use Subcentrex’s H.323 system

§ **Ringtec**: Use Ringtec’s H.323 system. When this is selected, please select “**dialnum**” from the “**Use dialplan**” list box and put Ringtec account into “**dial number**”.

§ **Smartcon**: Use Smartcon’s H.323 system

§ **Dda**: Use Dda’s H.323 system

§ **Vida**: Use Vida’s H.323 system

§ **Citron**: Use Citron’s H.323 system

§ **Asiasoft**: Use Asiasoft’s H.323 system

§ **Huawei**: Use Huawei’s H.323 system

§ **Asiainfo**: Use Asiainfo’s H.323 system

§ **Lucent**: Use Lucent’s H.323 system

§ **IPN**: Use IPN’s H.323 system

§ **Yiyang:** Use Yiyang's H.323 system

§ **Thinker:** Use Thinker's H.323 system

§ **Suntek:** Use Suntek's H.323 system

- **service addr, service id:** Please put the URI (domain name/IP address : service port) of the server into "**service addr**". When the default service port is used, ": service port" can be omitted.

If "**use service**" is checked, please put the URI of gatekeeper into "**service addr**". The default service port is 1719. If the gatekeeper has a GKID, please put it into "**service id**".

If "**use service**" is not checked, to make calls through gateway, please put the URI of the gateway into "**service addr**". To make IP-to-IP call, please clear this field. In both cases, the default service port is 1720.

- **nat traversal:** When the IP phone with private IP address need communicate with other IP phones in a different LAN or on Internet, please select an item from dropdown list to set the proxy used by the phone.

n **disable:** Select this item when the log in server and IP phone in the same LAN, or the log in system supports the IP phone working behind the LAN.

n **enable:** When the system does not support IP phone working behind the LAN, please select this item to search public IP address of the NAT device. With this item selected, "**nat addr**" field will be activated. Besides, port mapping (port forwarding) needs to be properly set up on NAT device.

n **citron:** With Citron private protocol used, select this item to fit into the GnuGK system transferring the voice and signal by router.

n **auvtech:** Select this item with Auvtech private system used.

n **vida:** Select this item with Vida private system used.

n **aivgr:** Select this item with aivgr private system used.

- **nat addr:** When "**nat traversal**" is set to "**enable**", please put the domain name of the servers (These web server helps to find out the public IP of the IP phone) into "**nat addr**", such as www.whatismyip.com.

- **nat ttl:** When IP phone sit behind a NAT device, it will send packets to server every "**nat ttl**" seconds to keep the port mapping on the NAT device alive. "**nat ttl**" is an integer between 10 and 65535 .default value is 20.

- **phone number:** The local phone number or username of this phone, usually is

allocated by system.

- **account:** While calling card is set, please type the account of chosen card into this field; while **md5 account** item selected in **local type** dropdown list, enter ID here; while **account** is selected in **local type** dropdown list, enter H323 ID here. While **prefix** item selected in **use dialplan** dropdown list, enter language indicating number, card number and # here, such as 14589653185 # .
- **pin:** While calling card is set, please type the password of chosen card into this field; while **md5 account** item selected in **local type** dropdown list, enter password here. While **prefix** item selected in **use dialplan** dropdown list, enter password and # here, such as 3185 # .
- **register port:** The local UDP port registered with server to accept incoming handshaking messages. any number between 1024 and 65535 is acceptable.
- **signal port:** This port is Q.931 port using TCP protocol, can be any number between 1024 and 65535.
- **control port:** This port is H.245 port using TCP protocol, can be any number between 1024 and 65535.
- **dtmf:** Set DTMF signal sending way by selecting **control string**, **inband audio**, **signal keypad** or **rfc 2833** from list box.
- **dtmf payload :** When DTMF select **rfc 2833**.This parameter can be used indicating type of RTP payload type. The value can be use integer 96-101.
- **rtp port:** RTP port is the port transferring and receiving voice packets using UDP protocol. This is an even number between 1024 and 65535, can't be the same as “**register port**”.
- **local type:** This parameter refers to how IP phone authenticate itself to the gatekeeper. The meaning of each item is as follow:
 - n **phone number:** Use phone number as E.164 and H323 ID to login the GK.
 - n **account:** Use phone number as E.164 and designated H323 ID filled in account field as H323 ID to login GK.
 - n **auto:** use support automated negotiate authentication account and pin about MD5 or CAT .
 - n **md5:** use MD5 authentication account and pin.
 - n **cat:** use CAT authentication account and pin.
 - n **sha1:** use SHA1 authentication account and pin.
- **call type:** Set call type by selecting the items in drop down list.


- n **normal:** Call out in normal way by selecting this item.
- n **advanced:** Call out in faststart and tunneling way by selecting this item. It is a recommended way with H323 protocol used.
- **rtp tos:** Set the TOS field of the IP header of the RTP packets. The bigger this value is 0, the higher priority the packet is .

phone settings:


phone settings					
use dialplan	disable	dial number		ddcode	
iddcode	886	iddprefix		dddprefix	
inner line	enable	innerline prefix			
dual mode	disable	dualmode prefix			
ring type	dtmf1	use digitmap	<input type="checkbox"/>	call waiting	<input type="checkbox"/>
forward number		fwd poweroff	<input type="checkbox"/>	fwd noanswer	<input type="checkbox"/>
fwd always	<input type="checkbox"/>	fwd busy	<input type="checkbox"/>	answer	30

Fig 3.4 Phone Setting

- **use dialplan:** Set whether use dial plan or use dial number by selecting the corresponding item in drop down list.
 - n **disable:** Do not use dial plan or dial number by selecting this item.
 - n **enable:** Use dial plan by selecting this item.
 - n **dialnum:** Use dial number by selecting this item. With this item selected, please enter the dial prefix into **dial number** field.
 - n **prefix:** Use 179XX service by selecting this item.
 - n **Hotline:** Use Hotline function by selecting this item. With this item selected, please enter the hotline number into **dial number** field.

 **Note** With 179xx service used, please set as follows: fill call prefix into dial number field, such as 17930; type; language indicating number, card number and # into account field; fill password and # into pin field.

- **dial number:** With **dialnum** selected in **use dialplan** drop down list, please enter the dial prefix into this field according to requirement of log in server. For example, with eTalk card used, enter 00 here.
- **ddd code:** With **enable** or **dialnum** selected in **use dialplan** drop down list, set area code according to E.164 dial rule. For example, Beijing 10; Shanghai
- **idd code:** With **enable** or **dialnum** selected in **use dialplan** drop down list, set country code according to E.164 dial rule. For example, China 86; U.S.A .1.
- **idd prefix:** With **enable** or **dialnum** selected in **use dialplan** drop down list, set international call prefix according to E.164 dial rule, such as 00.
- **ddd prefix:** With **enable** or **dialnum** selected in **use dialplan** drop down list, set long distance call prefix according to E.164 dial rule, such as 0.

 **Note** With **dialnum** selected in **use dialplan** drop down list, you can also set dddcode, iddcode, iddprefix and dddprefix according to requirement of system.

- **innerline:** Enable/disable innerline call by selecting corresponding items from dropdown list.
 - n **disable:** Disable call innerline by selecting this item.
 - n **enable:** enable call innerline by selecting this item.
- **innerlineprefix:** With **enable** selected in **innerline** dropdown list, please fill the number prefix to pick up innerline , such as 0.
- **ring type:** Set ring type by selecting corresponding item from drop down list.
 - n **dtmf 0-9:** Set ring as ordinary rings in different frequency
 - n **not disturb:** Set the phone do not ring by selecting this item.
 - n **pcmring:** Set ring as music shipped from factory by selecting this item.
 - n **user define:** Set ring as music saved by user by selecting this item.
- **Use digitmap:** Enable/disable digit map by checking/unchecking the box.
- **Call waiting:** Enable/disable call waiting by checking/unchecking the box.
- **forward number:** Enter receiving forwarded calls phone number into this field; If the IP phone used with modem, with **modem** item selected in **iptype** list box, and then fill ISP number into this field.
- **fwd poweroff:** Forward calls if power off by checking this box. Please enter receiving forwarded calls phone number into **fwd number** field.
- **fwd noanswer:** Forward calls without replying by checking this box. Please enter receiving forwarded calls phone number into **fwd number** field.
- **fwd always:** Forward all calls by checking this box. Please enter receiving forwarded calls phone number into **fwd number** field.
- **fwd busy:** Forward calls if busy by checking this box. Please enter receiving forwarded calls phone number into **fwd number** field.
- **answer:** Enter a number from 0 through 60 to set the entries of the seconds before the phone answer the call auto or forward the calls.

Audio settings:

audio settings					
vad	<input checked="" type="checkbox"/>	agc	<input type="checkbox"/>	aec	<input checked="" type="checkbox"/>
codec1	<input type="text" value="g7231"/>	codec2	<input type="text" value="g729"/>	codec3	<input type="text" value="g711u"/>
codec4	<input type="text" value="gsm"/>	codec5	<input type="text" value="null"/>		
g.723.1 high rate	<input checked="" type="checkbox"/>	audio frames	<input type="text" value="2"/>		
handset in	<input type="text" value="7"/>	handset out	<input type="text" value="20"/>	speaker out	<input type="text" value="20"/>

Fig 3.5 Audio Setting

- **vad:** Enable/disable VAD (voice activity detection).
- **agc:** Enable/disable AGC.
- **aec:** Enable/disable VEC.
- **codec1:** Set the priority 1of the audio compression algorithm. The options are **g729**, **g7231**, **g711u**, **g711a** and **gsm**.
- **codec2:** Set the priority 2of the audio compression algorithm. The options are **g729**, **g7231**, **g711u**, **g711a** and **gsm**.
- **codec3:** Set the priority 3of the audio compression algorithm. The options are **g729**, **g7231**, **g711u**, **g711a** and **gsm**.
- **codec4:** Set the priority 4of the audio compression algorithm. The options are **g729**, **g7231**, **g711u**, **g711a** and **gsm**.
- **codec5:** Set the priority 5of the audio compression algorithm. The options are **g729**, **g7231**, **g711u**, **g711a** and **gsm**.
- **g.723.1 high rate:** enable/disable g.723.1 high rate. G.723.1 high rate is 6.3kbps, low rate is 5.3kbps.
- **audio frame:** Set audio frames in RTP package. Minimum is 1 and maximum is 8.
- **handset in:** Drag the slider to adjust the volume of handset input. Drag it to the left to reduce the volume; while drag it to the right to increase the volume.
- **handset out:** Drag the slider to adjust the volume of handset output. Drag it to the left to reduce the volume; while drag it to the right to increase the volume.
- **speaker out:** Drag the slider to adjust the volume of handfree output. Drag it to the left to reduce the volume; while drag it to the right to increase the volume.

Other settings:

other settings			
password	<input type="text" value="1234"/>	super password	<input type="text" value="12345678"/>
debug	<input type="text" value="output"/>		
sntp ip	<input type="text" value="0.0.0.0"/>	upgrade type	<input type="text" value="disable"/>
use daylight	<input type="checkbox"/>	upgrade addr	<input type="text"/>
timezone	<input type="text" value="(GMT+08:00)Beijing, Hong Kong, Urumqi"/>		

Fig 3.6 Other Setting

- **password:** Set the password of the phone. (Default password is 1234).
- **super password:** Set the super password of the phone.(Default super password is 12345678).
- **debug:** Set the debug level of the phone.
 - n **disable:** Disable output the debug message by selecting this item.
 - n **output:** Output the operation information to the window, such as register, input by selecting this item.
 - n **output all:** Output all debug information and data in test window by selecting this item.
 - n **remote debug:** Save the debug information in SDRAM of IP phone by selecting this item.
 - n **no check:** Disable checking firmware tags when upgrading. This is not suggested, because it will increase the risk of upgrading the wrong firmware into the phone.
- **nts ip:** Fill IP address of time server here. When network without Internet, Fill special address IP 255.255.255.255 here.
- **upgradetype:** Set the auto-upgrade type of the phone.
 - n **disable :** Disable auto-upgrade .
 - n **all:** iPower phone will find matching firmware binary file and configuration file of the hardware type only at the FTP server specify by **upgradeaddr** item .
 - n **mac:** iPower phone will find matching firmware binary file and configuration file of the MAC address only at the FTP server specify by **upgradeaddr** item .
 - n **ppp id:** iPower phone will find matching firmware binary file and configuration file of the ppp id only at the FTP server specify by **upgradeaddr** item .
 - n **account:** iPower phone will find matching firmware binary file and configuration file of the account only at the FTP server specify by **upgradeaddr** item .
 - n **phonenumber:** iPower phone will find matching firmware binary file and configuration file of the phone only at the FTP server specify by **upgradeaddr** item .
- **upgrade addr:** Put IP address or domain name obtained by ISP of FTP server supplying program into this field.
- **use daylight:** Enable/disable daylight.
- **timezone:** Select correct time zone in list box.

When debug set as 0[disable], if input ordinary password (default one is 1234), then following page will pop up after clicking . And only those parameters can be modified.

network settings					
iptype	<input type="text" value="static"/>	ppp id	<input type="text"/>	ppp pin	<input type="text"/>
local ip	<input type="text" value="192.168.1.100"/>	subnet mask	<input type="text" value="255.255.255.0"/>	router ip	<input type="text" value="192.168.1.254"/>
dns	<input type="text" value="202.106.46.151"/>	dns2	<input type="text" value="202.96.128.68"/>		
protocol settings					
nat traversal	<input type="text" value="citron"/>	nat addr	<input type="text"/>		
phone number	<input type="text" value="82378801"/>	account	<input type="text"/>	rtp port	<input type="text" value="50000"/>
register port	<input type="text" value="1724"/>	signal port	<input type="text" value="1734"/>	control port	<input type="text" value="50000"/>
phone settings					
ring type	<input type="text" value="dtmf1"/>				
forward number	<input type="text"/>	fwd always	<input type="checkbox"/>	fwd noanswer	<input type="checkbox"/>
fwd poweroff	<input type="checkbox"/>	fwd busy	<input type="checkbox"/>	answer	<input type="text" value="30"/>
other settings					
password	<input type="text" value="1234"/>	upgrade type	<input type="text" value="disable"/>	upgrade addr	<input type="text"/>
sntp ip	<input type="text" value="0.0.0.0"/>	use daylight	<input type="checkbox"/>		
timezone	<input type="text" value="(GMT+08:00)Beijing,Hong Kong,Urumqi"/>				
<input type="button" value="Save/Reboot"/>		<input type="button" value="Address Book"/>		<input type="button" value="Upgrade Firmware"/>	

Fig 3.7 Setting Page using ordinary pin with Debug set as 0 [disable]

- **Update:** Click this button to save the configuration and the phone will reboot. Once the phone reboots successfully, the new configuration is effective.

Note After entering set page, if **Update** button is not clicked within 5 seconds, then when you click it again, the index page asking for pin will pop up again. Then please input the password again to enter the set page and then click **Update** button to confirm the modification.


Phone Book: Click this button to open the speed dial settings page. Please refer to Fig 3.7. In this page, you can set and save the speed dial number by typing the name into the **Name** field and then entering the corresponding number following the name. For example, input Jack in Name field following 001, and then input 5989426454 into Phone number field. Then Jack's number 5989426454 is saved in phone book. Then please click **Save/Back** button. In normal state, you can use speed dial to call numbers saved in phone book.

Phone Book					
No.	Name	Phone Number	No.	Name	Phone Number
001	<input type="text" value="Jack"/>	<input type="text" value="5989426454"/>	002	<input type="text" value="Allen"/>	<input type="text" value="192.168.1.56"/>
003	<input type="text"/>	<input type="text"/>	004	<input type="text"/>	<input type="text"/>
005	<input type="text"/>	<input type="text"/>	006	<input type="text"/>	<input type="text"/>
007	<input type="text"/>	<input type="text"/>	008	<input type="text"/>	<input type="text"/>
009	<input type="text"/>	<input type="text"/>	010	<input type="text"/>	<input type="text"/>

Fig 3.8 Phone Book Illustration


Upgrade Program: Click this button to update the program of IP phone. Before updating, please fill IP address of FTP server into **upgrade addr** field, and then click this button. Then the phone will read the corresponding bin files from the server and then load into the phone.

Update Digitmap: Click this button to update the digitmap of the phone. Before updating, please fill IP address of FTP server into **upgrade addr** field, and then click this button. Then the phone will read the corresponding map files from the server and then load into the phone.

 **Note** Please refer to *PalmTool User Guide* to learn how to write digitmap or just download TXT file from our site. Then please save it as “phone type.map” file, such as pa168S.map.

Ø Configured by PalmTool

PalmTool is a tool designed especially to configure and upgrade the PA168 IP phone. You can visit <http://www.aredfox.com/download/tools/PalmTool.zip> to download the latest version of PalmTool. Then please unzip the downloaded file and save them.

- a) On a PC connecting with the phone or at the same segment of the phone, double click  icon to open the PalmTool. The index page of PalmTool will popup.
- b) Input the IP address of the phone into **Local IP** field (such as 192.168.1.100), and then click “Phone Settings” button.

From Version1.24, use PalmTool to set the IP phone, please set debug as output or output all firstly, or PalmTool cannot connect IP phone. The parameters of PalmTool is same as the parameters in HTTP, so please refer to HTTP set chapter to learn how to set IP phone.

Ø Telnet Configuration

- On the PC choose **Start>Run**, and then type **telnet 192.168.1.100** into **Run** field in popping Run dialog. Or input **telnet 192.168.1.100** in the DOS window. Then the following information will be displayed.

```
iPower V1.41 settings
Password :
```

Then please type password. With debug is set as 0[disable], if type ordinary password (default one is 1234), after Return, you will see:

```
Password : ****
P: \>
```

If you type super password, then you will see:

```
Password : *****
P: \>
```

Above information indicates that IP phone is under setting mode, and then you can set the iPower IP phone by using the telnet commands.

Ø iPower Telnet Commands Explanation

iPower Telnet Commands

Command	Function
?	Supply command name and parameters
get	Display basic parameters of the iPower IP phone
set	Set parameters of the iPower IP phone
store	Save current settings to designated position
load	Load designated settings to current position
exit	Exit from the setting mode without saving the configuration
write	Exit with saving all configurations and restart iPower IP phone
ping	Ping other net parameter
ftp	The phone connects to FTP server and then get the files

Detail description of iPower IP phone's Telnet commands

Command ?

Syntax description: No optional parameter

Usage: Type command name and parameters following P:\> . Be used as the keyword to supply keyword and parameters of the relevant commands.

Relevant usage: None

Detailed description:

? List help of all commands

For example:

```

P:\>?
set
get          list settings
store x      store current to xth settings
load x       load xth settings to current
exit
write        save settings
    
```

Command get

Syntax description: No optional parameter of keywords

Usage: Display basic parameters of the iPower IP phone

Relevant usage: None

Detailed description:

get Display basic running parameters of the iPower IP phone. Input ordinary password without debug being set as 0[disable], or input super password with debug set as 0[disable], then following parameters of IP phone will be displayed:

iPower V1.41 settings

Password: *****

P:\>get

ipype 0[static]

ip 192.168.1.100	subnetmask 255.255.255.0	router 192.168.1.254
dns 202.106.196.152	dns2 202.106.196.115	mac 00-09-45-65-a3-e6
service 1[enable]		
servicetype 0[common]	serviceaddr 203.93.9.57	serviceid [empty]
natTraversal 1[enable]	nataddr www.showmyip.com	natttl 30
phonenum 182378009	account [empty]	pin [empty]
registerport 6800	signalport 6800	controlport 6802
registerttl 60	rtptos 0	rtpport 6802
jitter size 0		
calltype 1[advanced]	localtype 0[phonenum]	dtmf 0[control string]
dtmfpayload 101		
dialplan 2[dialnum]	dialnumber 17911	dddcode [empty]
iddcode [empty]	iddprefix [empty]	dddprefix [empty]
innerline 1[enable]	innerlineprefix [empty]	digitmap 0[disable]
dualmode 0[disable]	callwaiting 0[disable]	
answer 5	ringtype 0[dtmf0]	
fwdn umber [empty]	fwdpoweroff 1[enable]	
fwdalways 0[disable]	fwdbusy 0[disable]	fwdn oanswer 0[disable]
audiotype 0[g7231]	audioframes 1	6.3k 1[enable]
vad 1[enable]	agc 0[disable]	aec 1[enable]
handsetin 9	handsetout 21	speakerout 21
codec1 1[g7231]	codec2 0[g729]	codec3 2[g711u]
codec4 4[gsm]	codec5 5[null]	
password 1234	superpassword 19750407	debug 1[output]
upgradeaddr [empty]	upgradetype [disable]	
sntpip 0.0.0.0	daylight 0[disable]	
timezone 55[(GMT+08:00)Beijing,Hong Kong,Urumqi]		

Input ordinary password with debug set as 0[disable], following information will be seen:

iPower V1.41 settings

Password:****

P:\>get

iptype 0[static]

ip 192.168.1.100 subnetmask 255.255.255.0 router 192.168.1.254

dns 202.106.196.152 dns2 202.106.196.115

natTraversal 1[enable] nataddr rtpport 5144

registerport 5142 signalport 5142 controlport 5144

account [empty] pin [empty]

phonenum 182378009 fwdpoweroff 0[disable]

fwdalways 0[disable] fwdbusy 0[disable] fwdn oanswer 0[disable]

ringtype 0[dtmf0] answer 5

password 1234

upgradeaddr [empty] upgradetype [disable]

sntpip 0.0.0.0 daylight 0[disable]

timezone 55[(GMT+08:00)Beijing,Hong Kong,Urumqi]

Command set**Syntax description: set keywords value****Usage:** Used to configure password and other running parameters of iPower IP phone.**Detailed description:****set iptype X**

Set how IP phone gets relevant network parameters. X ranged from 0

through 3: 0: authorize users set IP address, subnet mask and router IP address of IP phone manually; 1: use DHCP mode. With this system, your LAN or router automatically assigns all the required network parameters to any device connected to it when the device log on. iPower IP phone is shipped from the factory with DHCP on. So, if your LAN or router is configured to use DHCP addressing, the IP phone's LAN parameters will automatically be configured as soon as it is connected to the LAN or router and powered up; 2: use PPPoE mode. Those ADSL and Cable Modem users please select this item for it is a protocol especially designed for them. With this system, ADSL ISP automatically assigns all the required IP parameters to any device connected to it when the device log on; 3: use modem mode. Those who use IP phone with modem, please set the value as 3.

set pppid XXX

With **iptype** set as **2**, use this command to set ADSL ID; with **iptype** set as **3**, use this command to set Modem ID.

set pppin XXX

With **iptype** set as **2**, use this command to set ADSL pin; with **iptype** set as **3**, use this command to set Modem pin.

set ip XXX.XXX.XXX.XXX

With **iptype** set as **0**, use this command to set IP address of IPOWERT IP phone.

set subnetmask XXX.XXX.XXX.XXX

With **iptype** set as **0**, use this command to set subnet mask of IPOWERT IP phone.

set router XXX.XXX.XXX.XXX

With **iptype** set as **0**, use this command to set router IP of network with IPOWERT IP phone.

set dns XXX.XXX.XXX.XXX

With **iptype** set as **0**, use this command to set IP address of DNS server.

set dns2 XXX.XXX.XXX.XXX

With **iptype** set as **0**, use this command to set IP of backup DNS server.

set mac XX-XX-XX-XX-XX-XX

Set MAC address of the iPower IP phone. Parameter xx-xx-xx-xx-xx-xx must be an HEX number.

set service X

Set register the gatekeeper or not. X ranged from 0 through 1. 0: do not register; 1: register.

set service type X

Enable/disable the repaid and service system .choose the repaid server provider. Parameter x ranged from 0 through 29:

0: common: disable repaid card; 4: use Mediarng service; 2: use eTalk card; 3: use Auvtech system; 5: use Ringtec service; 6: use Smartcon service; 7: use dda service; 8: use vida service; 9: use citron system; 10: use asiainfo system; 12: use zte system; 13: use huawei system; 16: use asiainfo system; 17: use Lucent system; 19: use IPN system; 20: use yuyuang system; 21: use thinker system; 22: use suntek system; 28: use txtc system.

set serviceaddr XXXX

Set IP address or domain name of gatekeeper.

set serviceid XXXXX


Set service ID according to required by service system.

set nattraversal X

Set NAT traversal or not. X ranged from 0 through 7: 0: do not use. When the log in server and IP phone in the same LAN, or the log in system supports the IP phone working behind the LAN; 1: Use NAT traversal. When the login system does not support IP phone working behind the LAN, please use this value to search public IP address of the NAT device. With this item selected, please make port mapping on NAT device; 2: With Citron private protocol used, use this value to fit into the GnuGK system transferring the voice and signal by router; 3: use this value with Innopath private system used; 5: use this value with vida private system used; 6: aivgr use this value with aivgr private system used; 7: use this value with Eproxy private system used.

set nataddr XXXXX

Set IP address of NAT device wan port or URI of free assistant service (Such as www.showmyip.com etc.) in Internet.

 **NOTE** The free service list of Internet: www.ip-calculator.com; www.ipchicken.com; www.ipchicken.com; www.showmyip.com; www.whatismyip.com; www.myipaddress.com; www.whatismyipaddress.com; ip.sbbs.net; www.whatismyipaddress.net; checkip.dyndns.org

set natttl XX

Set NAT TTL XX is an integer between 10 and 65535 sec. default value is 20 sec.

set phonenumber XXXXXXXXX

Set a phone number of iPower IP phone . Value xxxxx must be an Arabic numeral and no longer than 16 characters.

set account XXXXXX

While calling card is set, set account of chosen card; while **local type** is set use authentication type, set user ID; while **set localtype** is set as 1, set H323 ID.

set pin XXXXXXXXXXX

While calling card is set, set password of chosen card; while **local type** is set authentication type, set password.

set registerport XXXX

Set register port. XXXX is range from 1024 through 6553.

set signalport XXXX

This port is Q.931 port using TCP protocol. XXXX is range from 1024 through 65535.

set controlport XXXX

This port is H.245 port using TCP protocol. XXXX is range from 1024 through 65535.

set registerttl X

Set register TTL. X is range from 10 through 65535 Sec. default value is 60 Sec.

set rtptos X

Set TOS segment of IP head package in RTP digital follow.

set rtpport XXXX

RTP port is the port transferring and receiving voice flow using UDP protocol. XXXX is range from 1024 through 65535.

set jittersize X

Set buffer size of RTP package. X is range from 0-32.

set calltype X

Set call type of the phone. X is ranged from 0 through 2: 0: call out in normal way; 1: call out in faststart and tunneling way. It is a recommended way.

set localtype X

This command used to set how IP phone log in gatekeeper. X is ranged from 0 through 6: 0: use phone number as E.164 and H323 ID to login the GK; 1: use phone number as E.164 and designated H323 ID by set **account XXX** command; 2:use support automated negotiate about MD5 or CAT authentication system.3:use MD5 authentication account and pin;4: use CAT authentication account and pin; 5: use SHA1 authentication account and pin.

set dtmf X

Set DTMF relay type. X is ranged form 0 through 3: 0:control string; 1:inband audio; 2: signal keypad; 3:rfc 2833.

set dtmf payload X

When **dtmf X** select 3(**rfc 2833**).This parameter can be used indicating type of RTP payload type. The value can be use integer 96-101.

set dialplan X

Enable/disable dial plan and dial number. Parameter X ranged from 0 through 4: 0: disable dial plan; 1: enable dial plan; 2: use dial number; 3: use 179XX service.;4: use hotline function.

set dialnumber XX

When **set dialplan** value set as 2, please use this command to set **dial number**. For example, with eTalk card used, please set it as 00. When **set dialplan** value set as 4, please use this command to set **hotline**

set ~~idcode~~ XXX

Set the area code when set **dialplan** value set as 1 or 2. For example, the area code of Beijing is 10; the area code of Shanghai is 21, and the area code of Chengdu is 28, etc. Parameter xxx must be an Arabic numeral and no longer than 3 characters.

set idcode XXX

Set the country code when set **dialplan** value set as 1 or 2. For example, the country code of China is 86; the country code of USA is 1, etc. Parameter xxxx must be an Arabic numeral and no longer than 4 characters.

set iddprefix XX

Set IDD service prefix number when set **dialplan** value set as 1 or 2. For example, IDD service prefix number of china is 00; IDD service prefix number of USA is 1, etc. Parameter xxx must be an Arabic numeral and no longer than 3 characters.

set dddprefix XX

Set DDD service prefix number when set **dialplan** value set as **1** or **2**. For example, DDD service prefix number of china is 0; DDD service prefix number of USA is 1, etc. Parameter xxx must be an Arabic numeral and no longer than 3 characters.

set innerline X

Set use innerline call or not. X ranged from 0 through 1: 0: disable; 1: enable innerline call.

set innerlinepreifx X

With **innerline** set as **1[enable]** , please set the prefix to pick up inner line, such as 0.

set answer X

Set the ring seconds before the phone answers the call auto or forward the calls. X is ranged from 0 through 60.

set ringtype X

Set types of ring. X is ranged from 0 to 12: 0-9: ring as ordinary rings in different frequency; 10: do not ring; 11: ring as music shipped from factory; 12: ring as music saved by user

set digitmap X

Set whether to use digitmap. X ranged from 0 to 1: 0: do not use digitmap; 1: use digitmap.

set fwdnumber XXXXXXXX

Set receiving forwarded calls phone number. XXXX must be an Arabic numeral and no longer than 16 characters

set fwdpoweroff X

Enable/disable forward calls if power off. X is ranged from 0 through 1. 0: do not forward calls if power off; 1: forward call if power off.

set fwdalways X

Enable/disable forward all calls. X is ranged from 0 through 1. 0: do not forward all calls; 1: forward all calls.

set fwdbusy X

Enable/disable forward calls if busy. X is ranged from 0 through 1. 0: do not forward calls if busy; 1: forward call if busy.

set fwdnoanswer X

Enable/disable forward calls without replying. X is ranged from 0 through 1. 0: do not forward calls without replying; 1: forward call without replying.

set audioframes X

Set audio frames in RTP package. X is Arabic numerals between 0 and

set 6.3k X

With G.7231, set iPower IP phone to use 6.3K rate or not. X is ranged from 0 through 1: 0: use 6.3K rate; 1: use 5.3K rate.

set vad X

Enable/disable VAD. X is ranged from 0 through 1: 0: disable VAD; 1: enable VAD.

set agc X

Enable/disable AGC. X is ranged from 0 through 1: 0: disable AGC; 1: enable AGC.

set aec X

Enable/disable AEC. X is ranged from 0 through 1: 0: disable AEC; 1: disable AEC.

set handsetin X

Set initial volume of handset. X is ranged from 0 through 15.

set speakerin X

Set initial volume of microphone of the base. X is ranged from 0 through 15.

set handsetout X

Set initial volume of handout. X is ranged from 0 through 31.

set codec1 X

Set the priority 1 of the audio compression algorithm. X is range from 0 through 4: 0: g729; 1: g7231; 2: g711u; 3: g711a; 4: gsm.

set codec2 X

Set the priority 2 of the audio compression algorithm. X is range from 0 through 4: 0: g729; 1: g7231; 2: g711u; 3: g711a; 4: gsm.

set codec3 X

Set the priority 3 of the audio compression algorithm. X is range from 0 through 4: 0: g729; 1: g7231; 2: g711u; 3: g711a; 4: gsm.

set codec4 X

Set the priority 4 of the audio compression algorithm. X is range from 0 through 4: 0: g729; 1: g7231; 2: g711u; 3: g711a; 4: gsm.

set codec5 X

Set the priority 5 of the audio compression algorithm. X is range from 0 through 4: 0: g729; 1: g7231; 2: g711u; 3: g711a; 4: gsm.

set password XXXX

Set password of the iPower IP phone. XXX must be ASCII characters.

set superpassword XXXX

Set super password of the iPower IP phone. XXX must be ASCII characters.

set debug X

Set open debugging message output grade for special tool. X is ranged from 0 through 5: 0: close debugging output; 1: output the operation information to the window; 2: output all the bug information and data in test window; 3: save the bug information into SDRAM; 4: disable checks the mark.

set upgradeaddr XXX.XXX.XXX.XXX

Set IP address or domain name of FTP server supplying upgraded program of iPower IP phone.

set upgradetype X

Set auto-upgrade matching type, X is range from 0 through 5, 0-----disable; 1-----all ; 2----- mac; 3-----ppp id; 4----- account; 5----- phone number.

set ntsip XXX.XXX.XXX.XXX

Set IP address of time server.

set daylight X

Set use daylight or not. X ranged from 0 through 1: 0: do not use daylight; 1: use daylight.

set timezone XX

Set time zone.

Command store

Syntax description: no keyword. Parameter ranged from 0 through 4.

Usage: Save the current settings to the designated position.

Relevant Usage: store 1

Command load

Syntax description: no keyword. Parameter ranged from 0 through 4.

Usage: Load the designated settings to the current position.

Relevant Usage: load 1

Command exit

Syntax description: no keyword and parameter

Usage: Exit from Telnet command window without saving the configuration.

Relevant usage: None

Command write

Syntax description: No keyword and parameter

Usage: Save the configuration and restart the iPower IP phone.


Command ping

Syntax description: ping IP address

Usage: ping IP address of other NAT device

Relevant usage: In telnet window, input ping xx.xxx.xx.xx (an IP address) and return, then the result will be displayed. If the address is effective, “ping OK” will be seen; if the address is ineffective, nothing will be seen. Fox example:

```
P:\>ping 203.93.9.57
P:\>
ping OK
P:\>ping 27.56.120.56
P:\>
```

 **Note** Usually, the echo time of ping command is no more than 1 second. So if the result is not displayed in 5 seconds, ping command is fail.

ftp command

Syntax description: ftp value

Usage: the system connects to the FTP server auto to get the corresponding file and deal with it.


Relevant usage: ftp X


X ranged from 0 through 2:

X-0: Connect to FTP Server to get the file of updating program and save it to the SDRAM of the phone. Then the file can be read by PalmTool. This operation aims at testing.

X-1: Connect to FTP Server to get the file of updating program and update program Flash. This operation aims at updating program.

X-2: Connect to FTP Server to get the file of updating dial rules and update program Flash. This operation aims at updating dial rule.

 **Note** When you use ftp 0 and ftp 1 commands, if the file get from FTP server is too large or the net speed is too slow, then the process will not be seen in telnet window. Please be patient. Using ftp command in telnet to get file spends almost same minutes as getting file using phone. So if nothing is displayed after too long time, it means that ftp is fail.

 **Note** All the Telnet commands of iPower IP phone should be written in low case and the password is case sensitive.

Ø Upgrade iPower IP phone

Ø Set FTP server


FTP server can be supplied by the server provider as well as setup by the users in LAN. Please set the IP address of FTP server.


Ø Prepare Updated program

You can ask the server provider for the latest version of program or visit www.aredfox.com to download the latest version.

Ø Operation

If you have got the IP address of the FTP server from ISP, please do as follows:

- a) Use keypad to enter setting mode
- b) Use keypad to input the IP address of FTP server
- c) Press , then No19 light will blink twice a second. Once the phone restarts successfully, the new program is effective.


 **Note** Please do not change the name of the upgraded program, or the operation will be fail.

Ø Usage of the phone

Ø Receiving calls:

iPower IP phone can receive incoming calls from other iPower IP phone and devices that support the H.323 protocol. It works just like an ordinary phone for incoming calls. When it rings, you can receive the call by following methods:



- ① Use handset: Lift the handset and begin speaking. When the call is over, put





the handset back.

- ② Handset to hand free: While receiving call with handset, press
on the keypad and then put down the handset. When the call is over, press

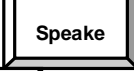again 



- ③ Hand free: Press  speak to the other party. When the call is over,
press 





- ④ Hand free to handset: While receiving the call with  pressed, pick
up the handset to continue the call. When the call is over, put back the
handset.



 **Note** When you communicate with the other party without lifting the handset, please do not exceed 40 CM from speaker.

Ø Place a call

• Call another iPower IP phone under the same Gatekeeper:


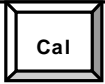

1. Handset: Pick up the handset and listen for the Internet dial tone. Then dial the phone number you wish to call and press  or  to end the dialing. Once the call connection has been established and the ring tone has sounded, wait for the other party to answer. When the other party answers, you can begin speaking. When the call is over, put back the handset. The dialed number has been saved into the buffer.

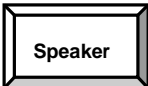2. Hand free: Press  and listen for the Internet dial tone. Then input the phone number you wish to call and press  or  to end the dialing. Once the call connection has been established and the ring tone has sounded, wait for the other party to answer. When the other party answers, you can begin speaking. When the call is over, Press  again. The dialed number has been saved into the buffer.


3. Blind dialing: Use the keypad to enter the phone number you wish to call and then press  or  to make the call. Once the call connection has


been established and the ring tone has sounded, wait for the other party to answer. When the other party answers, you can begin speaking. When the call is over, Press again. The dialed number has been saved into the buffer.

- **Place a call without login the Gatekeeper**

If IPOWERT IP phone does not login the Gatekeeper, you can place a call by lifting the handset or pressing  and then inputting the IP address of the other party, and then pressing  or 




- **Place a call through Gateway**

If iPower IP phone does not login the Gatekeeper, you can place a call through Gateway directly by lifting the handset or pressing  and then inputting the IP address of the other party.




 **Note** When you place a call without Gatekeeper or with Gateway, please log off Gatekeeper. To get the detailed operation please refer to Configuration chapter.

Ø View Records




- View missed calls

Click  then you will hear the record of missed call. Click  to turn the numbers orderly; click  to turn the numbers reservedly. If there is no record, you will hear nothing.

- View received call


Click  then you will hear the record of the received call. Click  to turn the number orderly; click  to turn the numbers reservedly. If there is no record, you will hear nothing.

- View dialed number

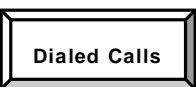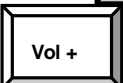Click  then you will hear the record of the dialed call. Click  to turn the number orderly; click  to turn the numbers

reservedly. If there is no record, you will hear nothing.

- When you hear the number, you want to dial, please press to place a call directly.

 **Note** iPower IP phone supports saving 80 entries unanswered call, dialed call and received call ranged from 1-80 at best. When the entries arrives 80, the latest record will cover the first one. The record will be lost when the phone restarts or turned on.

Appendix Table: iPower IP phone digital-character key map:

Keys	Press Once	Press Twice	Press Thrice	Press quartic	Press quintic
1	1	.	,	?/_	!//
2	2	A/a	B/b	C/c	[
3	3	D/d	E/e	F/f]
4	4	G/g	H/h	I/i	*
5	5	J/j	K/k	L/l	
6	6	M/m	N/n	O/o	#
7	7	P/p	Q/q	R/r	S/s
8	8	T/t	U/u	V/v	
9	9	W/w	X/x	Y/y	Z/z
*	.				
0	0	space	:/@	;/-	\/&
#	Case change				

Reserves the right to make changes in technical and product specification without prior notice.